

# Magnet Replacement Instruction Guide

for Berkshire #SCB-1015, #SCB-2015 & Classic #SCC-1008, #SCC-2008


Supplies included in this kit:

*11/64" drill bit, screw, rubber washer, top magnet plate, magnet, bottom magnet plate, flat washer, nut, catch plate and template*

Tools needed:


*electric drill, wrench, screwdriver & scotch tape*

1. Cut out the paper template to the right.
2. Fold on the dotted lines. ("X" must be visible)
3. Open mailbox door and slide the template between the notches at top of the mailbox. (make sure one half is inside the mailbox and the other half is outside the mailbox) *See Diagram 1*
4. Tape template to mailbox so it will not move.
5. Align 11/64" metal drill bit with "X" to make hole through top of mailbox.
6. Remove template and install magnet using screw, rubber washer top magnet plate, magnet, bottom magnet plate, catch plate flat washer and nut that were supplied. *See Diagram 1*

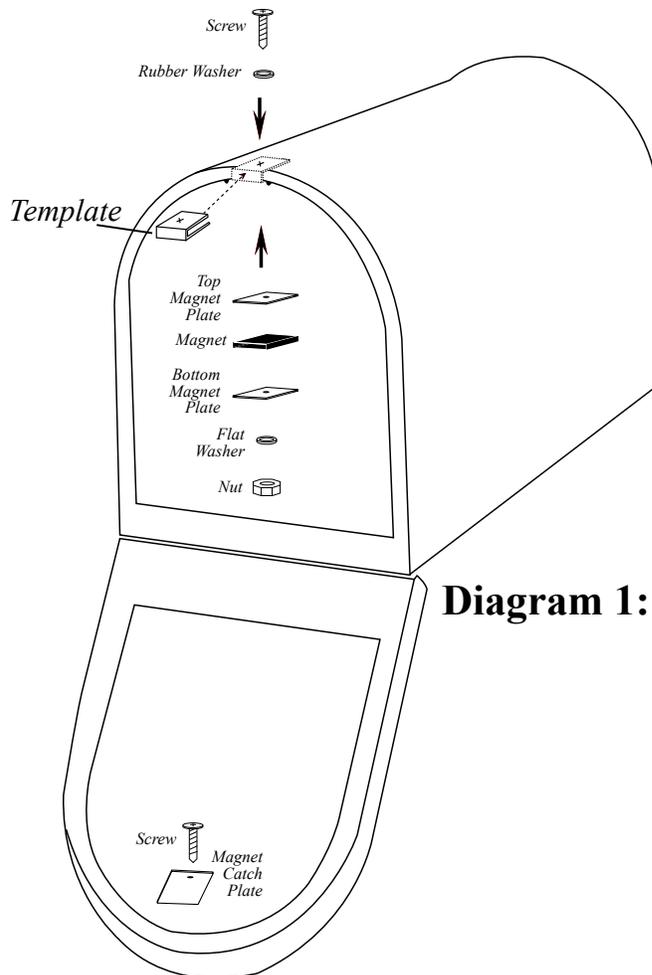

**Diagram 1:**

Cut out and use template to insure proper drill bit placement

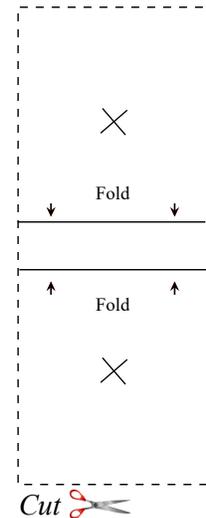

Revision Date: 02/26/2026  
Drawing Number: 12612